



Thank you for choosing Philips.

Need help fast?

*Read your Quick Use Guide and/or
Owner's Manual first for quick tips
that make using your Philips product
more enjoyable.*

*If you have read your instructions
and still need assistance,
you may access our online help at
www.usasupport.philips.com
or call*

***1-888-PHILIPS (744-5477)
while with your product
(and Model / Serial number)***

Model No.: _____

Serial No.: _____

PHILIPS

PANEL LAYOUT

Side 1

MODEL REGISTRATION INFORMATION	PANEL 2	PANEL 3	PANEL 8	PANEL 9	PANEL 14
SAFETY INFO	PANEL 4	PANEL 5	PANEL 10	PANEL 11	PANEL 15
PANEL 1	PANEL 6	PANEL 7	PANEL 12	PANEL 13	PANEL 16

Side 2

COVER	PANEL 17	PANEL 18	PANEL 23	PANEL 24	PANEL 29
LIMITED WARRANTY	PANEL 19	PANEL 20	PANEL 25	PANEL 26	PANEL 30
Panel Index Sequence and Panel	PANEL 21	PANEL 22	PANEL 27	PANEL 28	PANEL 31

PANEL INDEX

Subject	Panel No.	Subject	Panel No.
Antenna Basic Connection	1	AutoPicture™ Control	26
Audio/Video Connections		AutoSound™ Control	26
AV Input Jacks	4	Basic Remote Operation	3
Component Video Input Jacks	7	Basic Television Operation	3
Front (Side) Audio/Video Input Jacks ...	5	Cable Box Connection	2
Headphone Jack	5	Channel Edit	14
AV Output Jacks	8	Closed Captioning	25
S-Video Input Jacks	6	Format Controls	17
AutoLock™ Controls		Language Controls	11
Access Code	19	Limited Warranty	30
Block All Channels	21	Picture Menu Controls	15
Block Channels	20	QuadraSurf™	27-28
Clear All Blocked Channels	21	Remote Batteries	3
Movie Ratings	22	Remote Control Button Descriptions	9-10
Other Blocking Options	24	SleepTimer	25
TV Ratings	23	Sound Menu Controls	16
Understanding AutoLock™	18	Tuner Mode	12
Automatically Programming TV	13	Troubleshooting	29

Return your Product Registration Card today to get the very most from your purchase.

Registering your model with PHILIPS makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification

By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.

*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

PHILIPS

Congratulations on your purchase, and welcome to the "family!"

Dear PHILIPS product owner:

Thank you for your confidence in PHILIPS. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the PHILIPS "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.


Most importantly, you can count on our uncompromising commitment to your total satisfaction.


All of this is our way of saying welcome - and thanks for investing in a PHILIPS product.

P.S. To get the most from your PHILIPS purchase, be sure to complete and return your Product Registration Card at once.

Know these **safety** symbols



 This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: To reduce the risk of fire or electric shock, this apparatus should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on this apparatus.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

ATTENTION: Pour éviter les choc électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

PHILIPS Visit our World Wide Web Site at <http://www.usasupport.philips.com>


IMPORTANT SAFETY INSTRUCTIONS

Read before operating equipment

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturers instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or third prong are provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org
16. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
17. **Tilt/Stability** - All televisions must comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
 - Do not compromise these design standards by applying excessive pull force to the front, or top, of the cabinet which could ultimately overturn the product.
 - Also, do not endanger yourself, or children, by placing electronic equipment/toys on the top of the cabinet. Such items could unspectacularly fall from the top of the set and cause product damage and/or personal injury.
18. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
19. **Power Lines** - An outdoor antenna should be located away from power lines.
20. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges.

Section 810 of the National Electric Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
21. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings. comply with recommended international global safety standards for tilt and stability properties of its cabinet design.
22. **Battery Usage CAUTION** - To prevent battery leakage that may result in bodily injury, property damage, or damage to the unit:
 - Install all batteries correctly, with + and - aligned as marked on the unit.
 - Do not mix batteries (old and new or carbon and alkaline, etc.).
 - Remove batteries when the unit is not used for a long time.

Example of Antenna Grounding as per NEC - National Electric Code

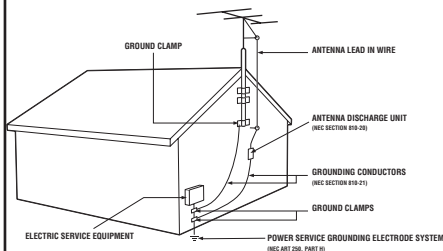

Note to the CATV system installer: This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.


Your home's signal input might come from a single (75 ohm) round cable, a Converter Box, or from an antenna. In either case the connection to the TV is very easy.

1 If your Cable TV signal or Antenna signal is a round cable (75 ohm) then you're ready to connect to the TV.

If your antenna has flat twin-lead wire (300 ohm), you first need to attach the antenna wires to the screws on a 300 to 75 ohm adapter.

If you have a Cable Converter Box: Connect the Cable TV signal to the Cable Signal IN(put) plug on the Converter.


Antenna Connection

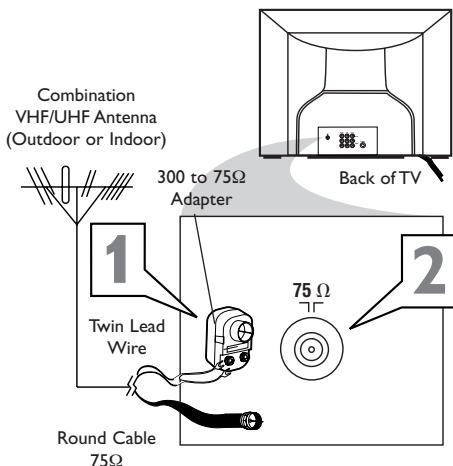

2 Connect the Cable TV cable or Antenna cable (or 300 to 75 ohm adapter) to the 75Ω plug on the TV.

If you have a Cable Converter Box: Connect the OUT(put) plug from the Converter to the 75Ω plug on the TV.

Direct Cable Connection

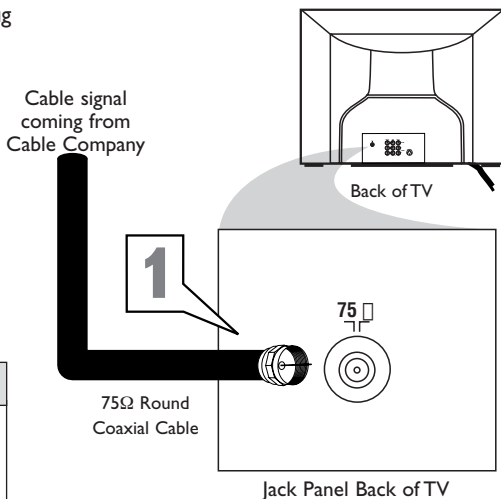

HELPFUL HINT

After using the AutoProgram Control, press the CH + and – buttons to scroll through all the channels stored in the television's memory.

If your cable signal uses a cable box or decoder, follow the easy steps below to complete the connection.

Cable Box (w/RF In/Outputs):

This connection will be mono.

- 1** Connect the Cable Company supplied cable to the signal IN(put) plug on the back of the Cable Box.
- 2** Using a separate round coaxial cable, connect one end to the OUT(put) (TO TV) plug on the back of the Cable Box.
- 3** Connect the other end of the round coaxial cable to the 75Ω input on the back of the television. Screw it down finger tight.

NOTE: If applicable, set the OUTPUT CHANNEL SWITCH on the back of the cable box to CH 3 or 4. Tune the TV to the same channel and change channels at the cable box. In some cases, the cable box will automatically tune to either channel 3 or 4, change channels until the picture appears.

Cable Box (w/Audio/Video Outputs):


This connection will supply Stereo sound.

- 4** Connect the Cable Company supplied cable to the cable signal IN(put) plug on the back of the Cable Box.
- 5** Using a RCA type Video Cable, connect one end of the cable to the Video (or ANT, your cable box may be labeled differently) Out jack on the cable box and the other end to the AVI Video Input on the TV.
- 6** Connect one end of the Audio Left and Right Cable to the left and right Audio Out L & R jacks on the cable box. Connect the other end to the AV In Audio L & R Input jacks on the TV.


NOTE: Use the AV button on the TV remote control to tune to the AV channel for the cable box signal. Once tuned, change channels at the cable box, not the television.

Cable Box (w/RF In/Outputs):

Cable Signal IN from the Cable Company

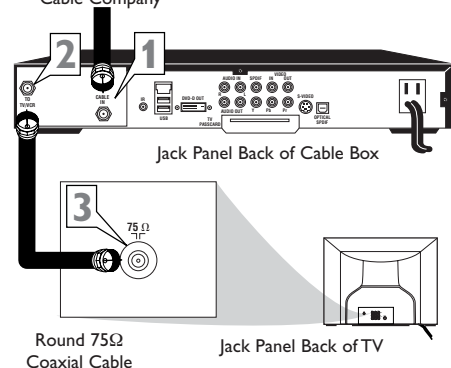

Cable Box (w/Audio/Video Outputs):

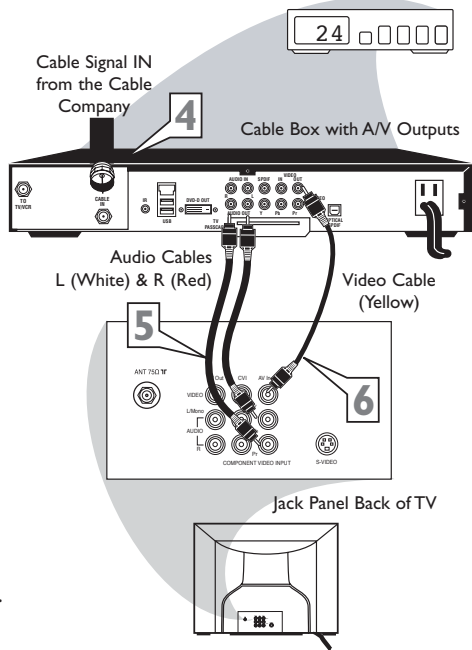

- 1 Press the POWER button** to turn the TV ON.


Note: You can also press any button on the front of the TV to turn the TV ON.

- 2 Press the VOLUME + button** to increase the sound level, **or the VOLUME - button** to lower the sound level.

Pressing both buttons at the same time will display the on-screen menu. Once in the menu, use these buttons to make adjustments or selections.

- 3 Press the CHANNEL UP + or DOWN - button** to select TV channels.


- 4 Point the remote control** toward the remote sensor window on the TV when operating the TV with the remote.

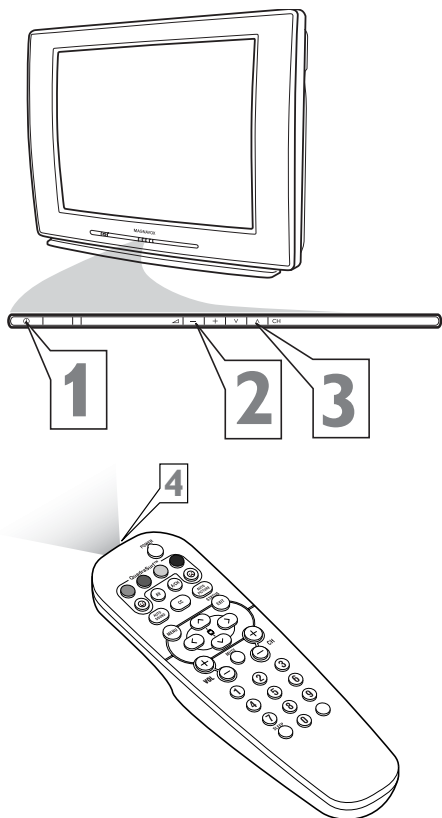

REMOTE CONTROL



To load the supplied batteries into the remote:

- 1. Remove the battery compartment lid** on the back of the remote.
- 2. Place the batteries (2-AA) in the remote.** Be sure the (+) and (-) ends of the batteries line up correctly (inside of case is marked.)
- 3. Reattach the battery lid.**

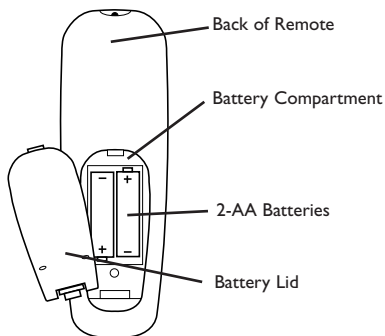

The TV's audio/video input jacks are for direct picture and sound connections between the TV and a VCR (or similar device) that has audio/video output jacks. Follow the easy steps below to connect an accessory device to the AV In Input Jacks located on the back of the TV.

- 1** Connect the **VIDEO (yellow)** cable to the VIDEO AV In jack on the back of the TV.
- 2** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) AV In jacks on the rear of the TV.
- 3** Connect the **VIDEO (yellow)** cable to the VIDEO OUT jack on the back of the VCR.
- 4** Connect the **AUDIO (red and white)** cables to the AUDIO (left and right) OUT jacks on the rear of the VCR.
- 5** Turn the **VCR (accessory device)** and the **TV ON**.
- 6** Press the **AV button** on the remote control to select the AV channel. AV will appear in the upper left corner on the TV screen.
- 7** With the VCR (or accessory device) ON and a prerecorded tape (CD, DVD, etc.) inserted, **press the PLAY** button to view the tape on the television.

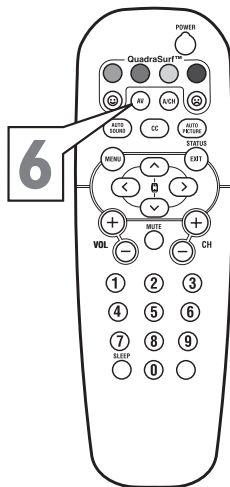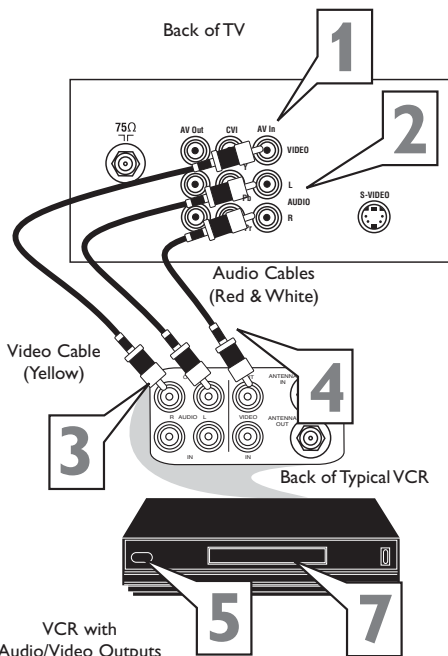

HELPFUL HINT

All the AV channels can be selected by pressing the Channel + or - buttons. The AV channels can also be added to the QuadraSurf™ buttons for quick access.

Audio and Video Side Inputs are available for a quick connection of a VCR, to playback video from a camera, or attach a gaming device. Use the AV button on the remote control to tune these inputs.

1 Connect the video (yellow) cable from the Video output on the Camera (or accessory device) to the Video (yellow) Input located on the SIDE of the TV.

2 For Stereo Devices: Connect the audio cable (red and white) from the Audio Left and Right Outputs on the Camera to the Audio In (white) jack on the SIDE of the television.


For Mono Devices: Connect one end of the audio cable from the Audio Out jack on the device to the Audio In (white) jack on the SIDE of the television.

3 Turn the TV and the accessory device ON.

4 Press the AV button on the remote control to tune the TV to the side (or front) input jacks. "AV" will appear on the TV screen.

5 Press the PLAY ► button on the accessory device to view playback, or to access the accessory device (camera, gaming unit, etc.).

NOTE: Side AV connection has priority over rear AV connection.

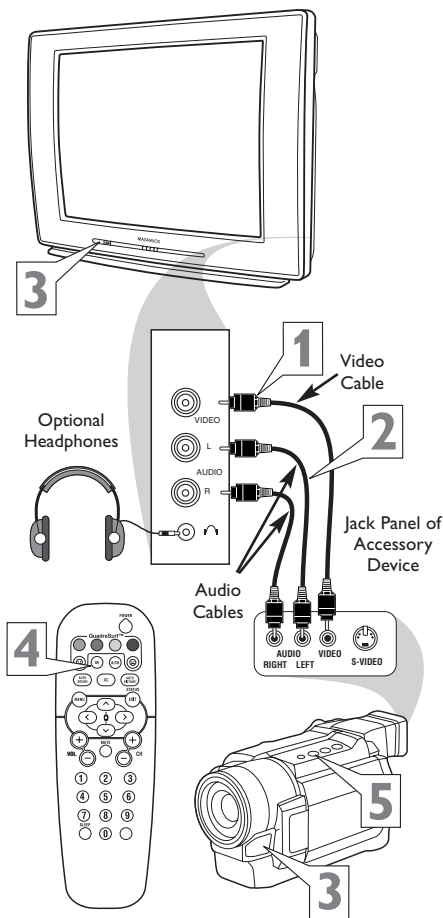

The S(uper)-Video connection on the rear of the TV can provide you with better picture detail and clarity for the playback of accessory sources such as DBS (digital broadcast satellite), DVD (digital video discs), video games, and S-VHS VCR (video cassette recorder) tapes than the normal antenna picture connections.

NOTE: The accessory device must have an S-VIDEO OUT(put) jack in order for you to complete the connection on this page.

NOTE: When using additional accessories, only one external source will be audible, as there is only one set of sound inputs. Component Video (CVI) input will dominate over all other inputs, including S-Video (S-VHS) and AV. When S-Video (S-VHS) is used, it will dominate over the AV input.


1 Connect one end of the S-VIDEO CABLE to the S-VIDEO jack on the back of the TV. Then connect one end the AUDIO (red and white) CABLES to the AV In AUDIO L and R (left and right) jacks on the rear of the TV.

2 Connect other end of the S-VIDEO CABLE to the S-VHS (S-Video) OUT jack on the back of the VCR. Then connect the other ends of the AUDIO (red and white) CABLES to the AUDIO (left and right) OUT jacks on the rear of the VCR.

3 Turn the VCR and the TV ON.

4 Press the AV button or the CH + or CH - buttons on the remote to scroll the channels until SVHS appears in the upper left corner of the TV screen.


5 Now your ready to place a prerecorded video tape in the VCR and press the PLAY button.

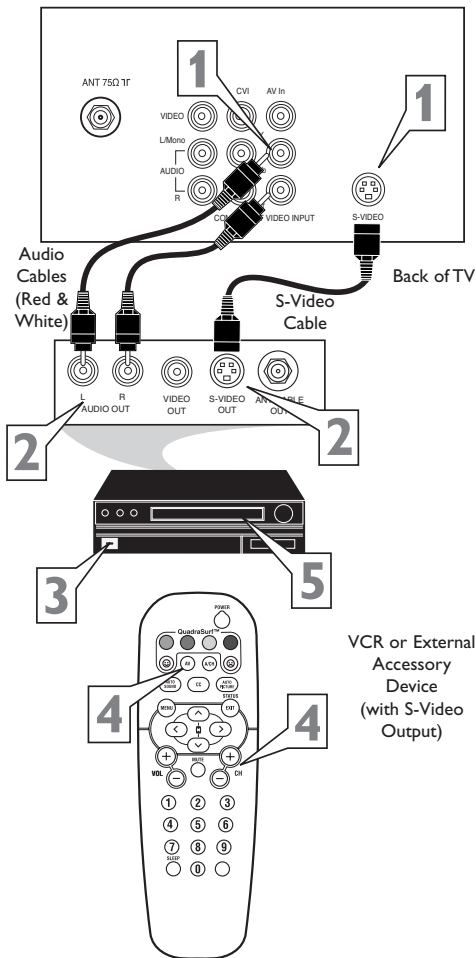

Component Video inputs provide for the highest possible color and picture resolution in the playback of digital signal source material, such as with DVD players. The color difference signals (Pb, Pr) and the luminance (Y) signal are connected and received separately, which allows for improved color bandwidth information (not possible when using composite video or S-Video connections).

NOTE: When using additional accessories, only one external source will be audible, as there is only one set of sound inputs. Component Video (CVI) input will dominate over all other inputs, including S-Video (S-VHS) and AV. When S-Video (S-VHS) is used, it will dominate over the AV input.

- 1 Connect the Component (Y, Pb, Pr) Video OUT** jacks from the DVD player (or similar device) to the (Y, Pb, Pr) in(put) jack on the TV. When using the Component Video Inputs, it is best not to connect a signal to the AV in Video Jack.
- 2 Connect the red and white AUDIO CABLES** to the Audio (left and right) output jacks on the rear of the accessory device to the Audio (L and R) AV In Input Jacks on the TV.
- 3 Turn the TV and the DVD (or digital accessory device) ON.**
- 4 Press the AV button or the CH + or CH - buttons** to scroll the available channels until CVI appears in the upper left corner of the TV screen.
- 5 Insert a DVD disc into the DVD player and press the PLAY ► button on the DVD Player.**

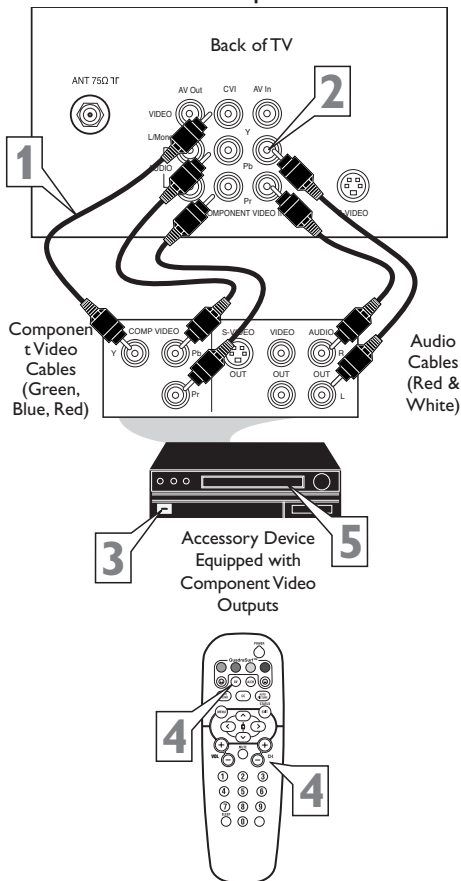

HELPFUL HINT

The description for the component video connectors may differ depending on the DVD player or accessory digital source equipment used (for example, Y, Pb, Pr; Y, B-Y, R-Y; Y, Cr, Cb). Although abbreviations and terms may vary, the letters *b* and *r* stand for the blue and red color component signal connectors, and *Y* indicates the luminance signal. Refer to your DVD or digital accessory owner's manual for definitions and connection details.

The Audio/Video Output jacks are great for recording with a VCR or used to connect an external audio system for better sound reproduction.

AUDIO SYSTEM CONNECTION:

1 Connect one end of the **R(ight) and L(ef) AUDIO** jacks on the TV to the R and L audio input jacks on your amplifier or sound system. Set the audio system's volume to a normal listening level.

2 Turn the TV and audio system **ON**. To adjust the volume on the audio system, you will need to change the volume at the external audio system, not the television.

SECOND VCR CONNECTION:

NOTE: Refer to panel number 4 for the proper hookup of the first VCR. Follow the instructions on how to tune to the AV channel to view a pre-recorded tape.


The following steps allow you to connect a second VCR to record the program while your watching it.

1 Connect one end of the **yellow Video Cable** to the AV Out VIDEO plug. Connect the other end to the VIDEO IN plug on the second VCR.


2 Connect one end of the **red and white Audio cable** from the AV Out AUDIO L and R plugs on the TV to the AUDIO IN plugs on the VCR.

3 Turn the **Second VCR ON**, insert a VHS tape and it's ready to record what's being viewed on the TV screen.

AUDIO SYSTEM CONNECTION:

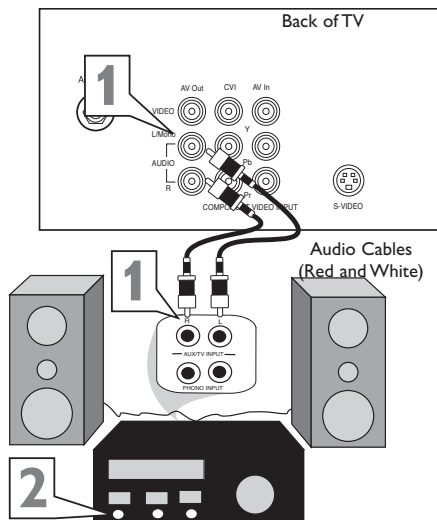

SECOND VCR CONNECTION:

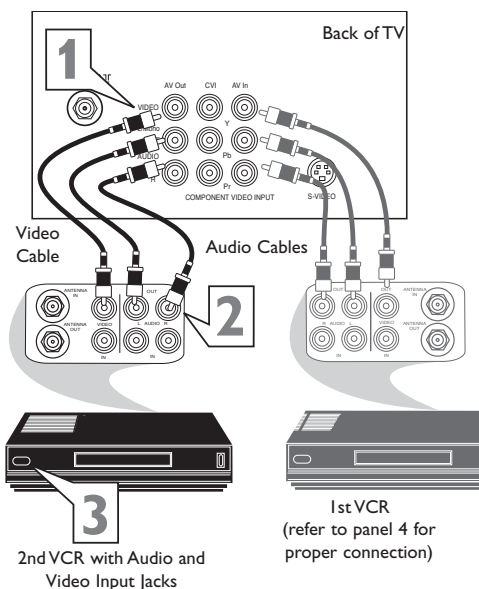

QUADRASURF Buttons

(Red, Green, Yellow, Blue) Allows you to store and surf up to 10 channels you choose for each colored button.

AV Button

Press to select an accessory signal input from the front AV Inputs.

SMILEY Button

Press to add channels to the "QuadraSurf" lists. Works with all colored buttons.

AUTO SOUND Button

Press repeatedly to choose from different factory pre-defined sound settings. Choose from Personal (how you set the Sound Menu options), Voice (for programming with speaking only), Music (for musical type programs such as concerts), or Theatre (used when watching movies).

MENU Button

Press to display the on-screen menu. Also can be used to back out of the on-screen menu until it disappears from the TV's screen.

CC Button

Press to activate the Closed Captioning options. Repeatedly pressing the CC button will scroll the available options on the TV screen.

VOL(ume) + or - Buttons


Press the VOL + button to increase the TV's sound level. Press the VOL - button to decrease the TV's sound level.


MUTE Button

Press the mute button to eliminate the sound being heard from the TV. "MUTE" will be displayed on the TV's screen. Press again to restore the TV's volume to its previous level.

SLEEP Button

Press the Sleep button to set the TV to automatically turn itself off after a set period of time. Press repeatedly to select 15, 30, 45, 60, 90, 120, 180, or 240 minutes.

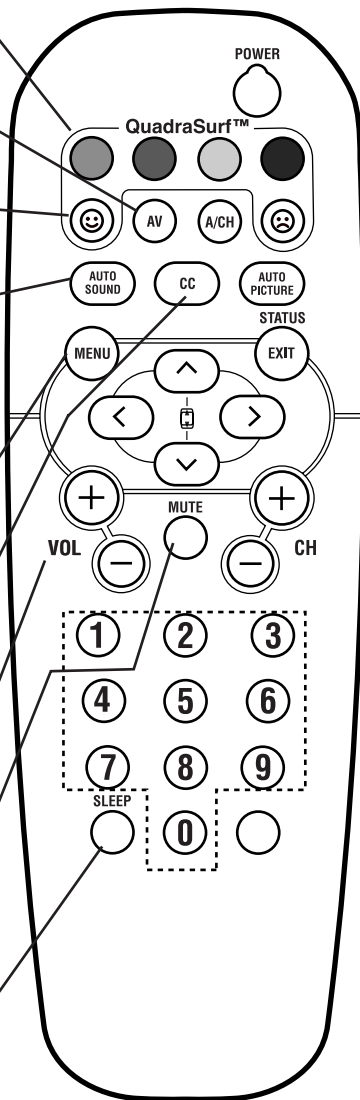

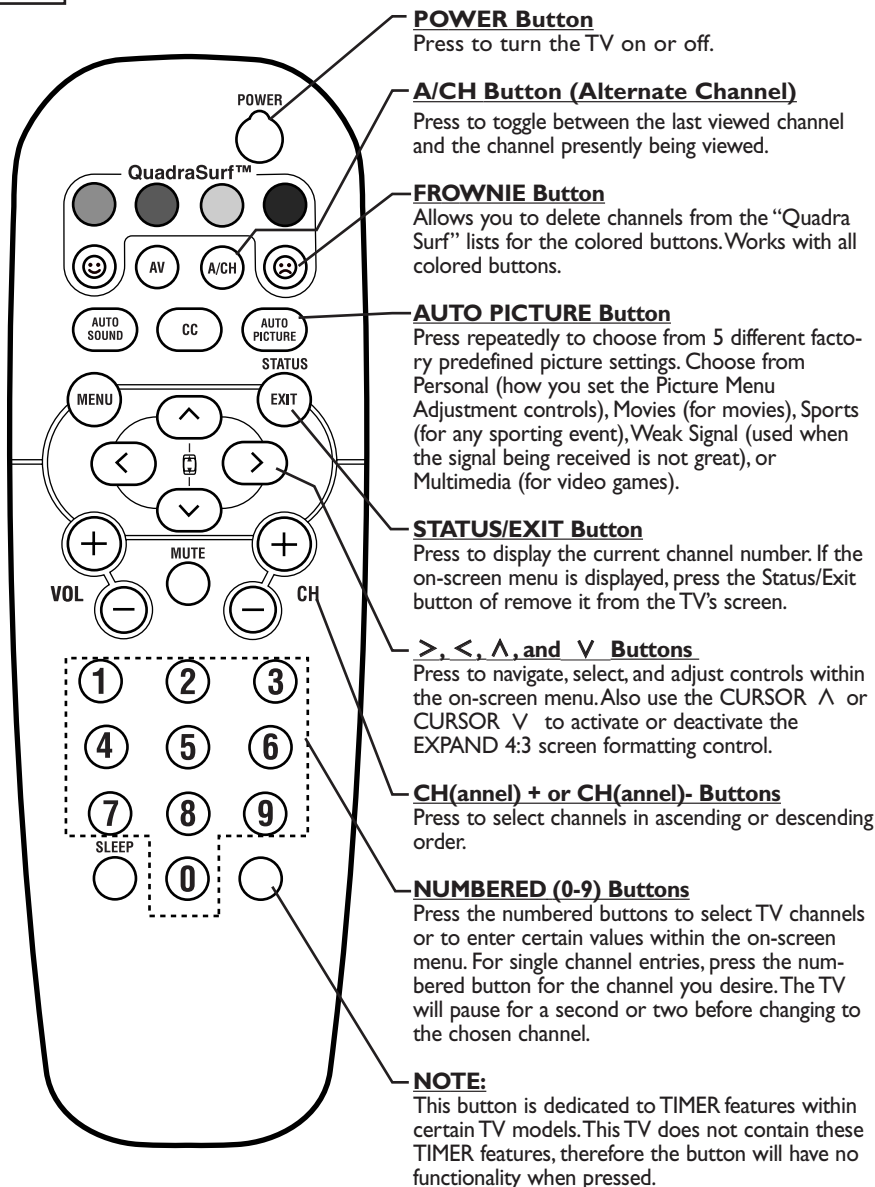




HOW TO USE THE LANGUAGE CONTROL

For French and Spanish speaking TV owners an onscreen LANGUAGE option is present. With the LANGUAGE control you can set the TV's on-screen menu to be shown in English, French, or Spanish.

- 1 Press the MENU button** on the remote control to show the on-screen menu.
- 2 Press the CURSOR UP \wedge or DOWN \vee buttons** to scroll through the on-screen menu until the word **INSTALL** is highlighted.
- 3 Press the CURSOR RIGHT $>$ button** to display the **INSTALL** menu features.
- 4 Press the CURSOR UP \wedge or DOWN \vee buttons** to scroll through the Install features until the word **LANGUAGE** is highlighted.
- 5 Press the CURSOR RIGHT $>$ button repeatedly** to select English, Francais (French), or Español (Spanish).
- 6 When finished, press the STATUS/EXIT button** to remove the menu from the TV's screen.

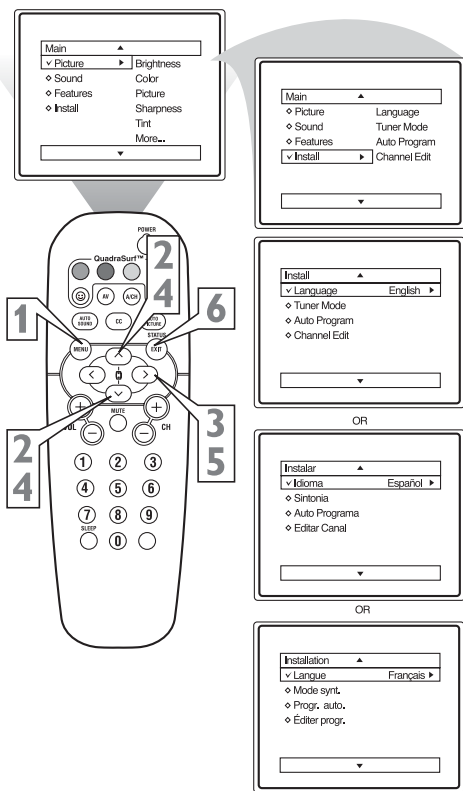


HELPFUL HINT

The Language control only makes the TV's on-screen MENU items appear in English, Spanish, or French text. It does not change the other on-screen text features such as Closed Caption (CC) TV shows.

The **TUNER MODE** control allows you to change the TV's input signal to either **ANTENNA**, **CABLE**, or **AUTO** mode. It's important for the TV to know what type of signal to look for (Cable TV or an Antenna). In the **AUTO** mode, when the **AUTO PROGRAM** feature is activated, the TV will automatically choose the correct mode.

- 1 Press the **MENU** button on the remote to show the on-screen menu.
- 2 Press the **CURSOR UP** \wedge or **DOWN** \vee buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.
- 3 Press the **CURSOR RIGHT** $>$ button to display the **INSTALL** menu features.
- 4 Press the **CURSOR UP** \wedge or **DOWN** \vee buttons to scroll the Install features until the words **TUNER MODE** is highlighted.
- 5 Press the **CURSOR RIGHT** $>$ button to select either **ANTENNA**, **CABLE**, or **AUTO** mode.
- 6 When finished, press the **STATUS /EXIT** button to remove the on-screen menu from the TV's screen.

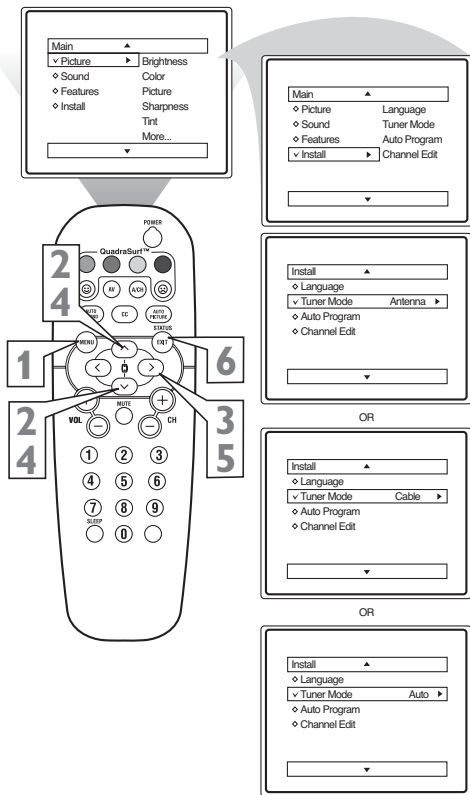

Helpful Hints

When **CABLE** is selected, channels 1-125 are available.

When **ANTENNA** is selected, channels 2-69 are available.

When **AUTO** is selected, the TV will automatically set itself to the correct mode based on the type of signal it detects when the **AUTO PROGRAM** feature is activated.

Your TV can automatically set itself for local area (or Cable TV) channels. This makes it easy for you to select only the TV stations in your area when the CHANNEL (+), (-) buttons are pressed.

Note: Make sure the antenna or cable signal connection has been completed before AUTO PROGRAM is activated.

1 Press the **MENU** button on the remote to show the on-screen menu.


2 Press the **CURSOR UP** Δ or **CURSOR DOWN** ∇ buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.

3 Press the **CURSOR RIGHT** \rightarrow button to display the **INSTALL** menu features.

4 Press the **CURSOR UP** Δ or **CURSOR DOWN** ∇ buttons to scroll the Install features until the words **AUTO PROGRAM** are highlighted.

5 Press the **CURSOR RIGHT** \rightarrow button to start the Auto Program scanning of channels. Auto Programming will store all available channels in the TV's memory then tune to the lowest available channel when done.

6 When finished, press the **STATUS/EXIT** button to remove the menu from the TV's screen.

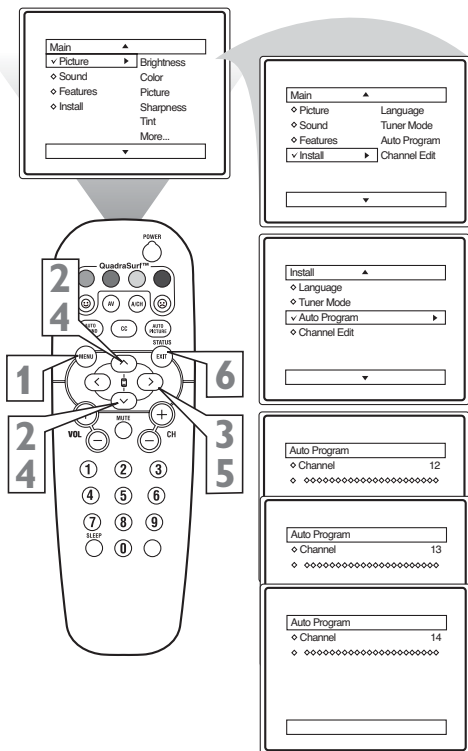

Helpful Hints

When CABLE is selected, channels 1-125 are available.

When ANTENNA is selected, channels 2-69 are available.

When AUTO is selected, the TV will automatically set itself to the correct mode based on the type of signal it detects when the AUTO PROGRAM feature is activated.

Channel Edit makes it easy for you to **ADD** or **DELETE** channels from the list of channels stored in the TV's memory.

1 Press the MENU button on the remote control to show the on-screen menu.

2 Press the CURSOR UP Δ or DOWN ∇ buttons to scroll through the on-screen menu until the word **INSTALL** is highlighted.

3 Press the CURSOR RIGHT \rightarrow button to display the **INSTALL** menu features.

4 Press the CURSOR UP Δ or DOWN ∇ buttons to scroll through the Install features until the words **CHANNEL EDIT** are highlighted.


5 Press the CURSOR RIGHT \rightarrow button to display the **CHANNEL EDIT** options.

6 With the CHANNEL EDIT options displayed, and CHANNEL NO. highlighted; you can use the cursor buttons to scroll through all available channels that you wish to add (skipped OFF) or delete (Skipped ON) from the TV's memory. You can also use the **NUMBERED** buttons to go directly to a specific numbered channel that you want to add or skip. Or, you can also use the **CH+** or **CH-** to quickly scan through the channels that have not been skipped.

7 Using the CURSOR DOWN ∇ button, scroll the menu to highlight the word **SKIPPED**.

8 Now use the CURSOR RIGHT \rightarrow to toggle between ON or OFF. If ON is selected the channels is skipped when scrolling channels with the **CH+** or **CH-** buttons. If OFF is selected the channels is not skipped when scrolling channels with the **CH+** or **CH-** buttons.

9 When finished, press the STATUS/EXIT button to remove the menu from the screen.

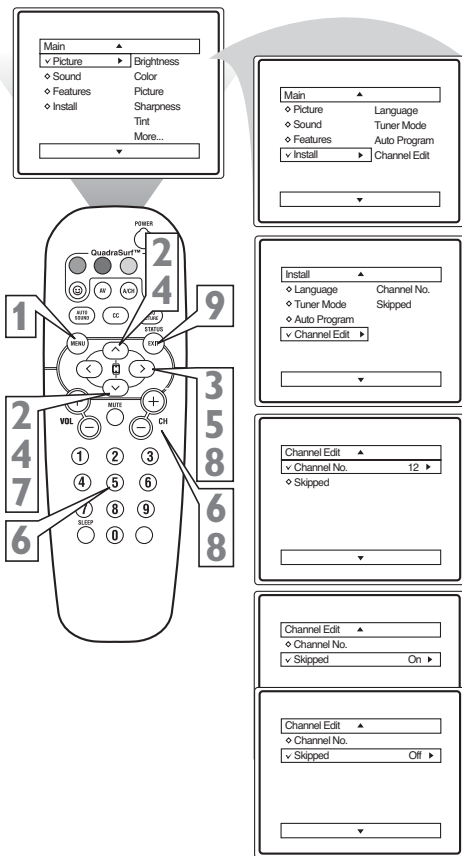


HELPFUL HINTS

An "X" appearing in front of any channel will indicate that channel has skip on. When the **CH +** or **CH -** buttons are used, those channels will be skipped.

To adjust your TV picture controls, select a channel and use the Picture Menu Controls listed below:

- 1 BRIGHTNESS CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons until the darkest parts of the picture are as bright as you prefer.
- 2 COLOR CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons to add or eliminate color.
- 3 PICTURE CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons until lightest parts of the picture show good detail.
- 4 SHARPNESS CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons to improve detail in the picture.
- 5 TINT CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons to obtain natural skin tones.
- 6 COLOR TEMP CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons to select NORMAL, COOL, or WARM picture preferences. (NORMAL will keep the whites, white; COOL will make the whites, bluish; and WARM will make the whites, reddish.)
- 7 CONTRAST + CONTROL :** Press the **CURSOR RIGHT >** or **LEFT <** buttons to toggle the control On or OFF. The Contrast + control helps to "sharpen" the picture quality. The black portions of the picture become richer in darkness and the whites become brighter.

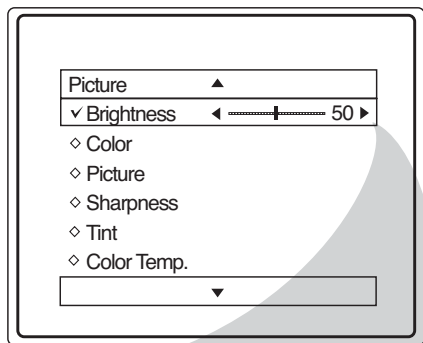

✓ Brightness ◀ ———|——— ▶ 65

✓ Color ◀ ———|——— ▶ 50

✓ Picture ◀ ———|——— ▶ 50

✓ Sharpness ◀ ———|——— ▶ 50

✓ Tint ◀ ———|——— ▶ 0

✓ Color Temp. Normal


Warm
or
Cool

✓ Contrast + On

Off

To adjust your TV sound, select and use the Sound Menu Controls listed below:

- 1 TREBLE:** Press the **CURSOR RIGHT > or LEFT <** buttons to adjust the control. The control will enhance the high frequency sounds.
- 2 BASS:** Press the **CURSOR RIGHT > or LEFT <** buttons to adjust the control. The control will enhance the low frequency sounds.
- 3 BALANCE:** Press the **CURSOR RIGHT > or LEFT <** buttons to adjust the level of sound coming from the left and right speakers.
- 4 AVL:** (Auto Volume Leveler) Press the **CURSOR RIGHT > or LEFT <** buttons to turn the control On or Off. When On, AVL will level out the sound being heard when sudden changes in volume occur during commercial breaks or channel changes.
- 5 INCR. SURROUND:** Press the **CURSOR RIGHT > or LEFT <** buttons to select between Incr. Surround or Stereo settings (If Stereo), or select Spatial or Mono (If Mono).
- 6 SOUND:** Press the **CURSOR RIGHT > or LEFT <** buttons to select between Stereo or Mono settings. Note: If Stereo is not present on a selected show and the TV is placed in the Stereo mode, the sound coming from the TV will remain in the Mono mode.

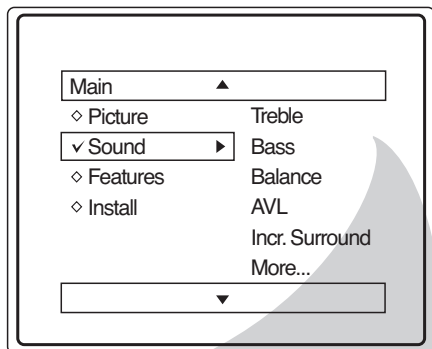

✓ Treble ◀ ———▶ 50 ▶

✓ Bass ◀ ———▶ 50 ▶

✓ Balance ◀ L ———▶ R ▶

✓ AVL On
or Off

✓ Incr. Surround Spatial
or Mono


✓ Incr. Surround Incr. Surround
or Stereo

✓ Sound Mono
or Stereo

Many times while watching movies from a DVD player the image is shown in "letter box" format. This is the format that is shown in movie theaters. When shown on a TV screen, the image will have areas of black on top and bottom of the screen.

- 1** Press the **MENU** button on the remote to display the on-screen menu.
- 2** Press the **CURSOR DOWN** **V** button until the word **Features** is highlighted.
- 3** Press the **CURSOR RIGHT** **>** button to display the **Features** menu options (AutoLock or Format).
- 4** Press the **CURSOR DOWN** **V** button until the word **Format** is highlighted.
- 5** Press the **CURSOR RIGHT** **>** or **LEFT** **<** buttons to select one of the two options 4:3 or Expand 4:3.
4:3 - Standard format for the TV.
Expand 4:3 - Enlarges the picture to fill out the entire screen area, eliminating the "letter box" effect.
- 6** When finished, press the **STATUS /EXIT** button to remove the menu from the TV's screen.

Note: The Expand 4:3 format can also be activated using the **CURSOR UP** **^** or **DOWN** **V** buttons when the onscreen menu is not being displayed. Pressing these buttons will toggle the standard 4:3 format and the Expand 4:3 format.

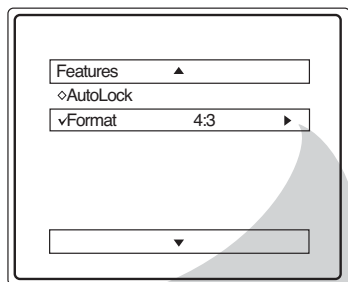


✓ Format 4:3 Expand ▶



4:3



Expand 4:3

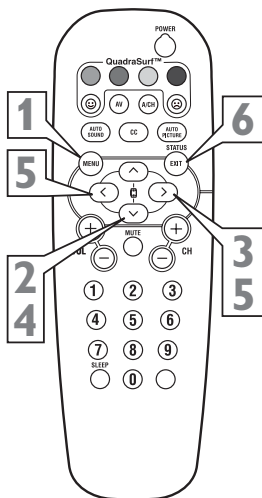

The AutoLock™ feature is an integrated circuit that receives and processes data sent by broadcasters, or other program providers, that contain program content advisories. When programmed by the viewer, a TV with AutoLock™ can respond to the content advisories and block program content that may be found objectionable (such as offensive language, violence, sexual situations, etc.). This is a great feature to censor the type of viewing children may watch.

AutoLock™ offers various BLOCKING controls from which to choose:

Access Code - An Access Code must be set to prevent children from unblocking questionable or censored programming set by their parents.

Channel Block - After an access code has been programmed, you can block individual channels including the A/V inputs.

Clear All - Allows you clear all channels being blocked from your viewing set with the Channel Block Control.

Block All - Allows you to block ALL channels and A/V inputs at one time.

Movie Ratings - Certain blocking options exist which will block programming based on ratings patterned by the Motion Pictures Association of America.

TV Ratings - Just like the Movie Ratings, programs can be blocked from viewing using standard TV ratings set by TV broadcasters.

MOVIE RATINGS

G: General Audience - All ages admitted. Most parents would find this program suitable for all ages.

PG: Parental Guidance Suggested - This programming contains material that parents may find unsuitable for younger children.

PG-13: Parents Strongly Cautioned - This programming contains material that parents may find unsuitable for children under the age of 13.

MOVIE RATINGS Continued

R: Restricted - This is programming is specifically designed for adults. Anyone under the age of 17 should only view this programming with an accompanying parent or adult guardian.

NC-17: No one under the age of 17 will be admitted. - This type of programming should be viewed by adults only.

X: Adults Only - This type of programming contains one or more of the following: very graphic violence, very graphic and explicit or indecent sexual acts, very coarse and intensely suggestive language.

TV RATINGS

TV-Y -- Designed for a very young audience, including children ages 2-6.

TV-Y7 -- It may be appropriate for children age 7 and above who have acquired the development skills needed to distinguish between make-believe and reality.

TV-G -- Suitable for most audiences, this type of programming contains little or no violence, no strong language, and little or no sexual dialogue or situations.

TV-PG -- This program contains material that parents may find unsuitable for younger children. Could contain Moderate violence (V), some sexual situations (S), infrequent coarse language (L), or some suggestive dialogue (D).



TV-14 -- This program contains some material that many parents would find unsuitable for children under 14 years of age. This type of programming contains one or more of the following: intense violence (V), intense sexual situations (S), strong coarse language (L), or intensely suggestive dialogue (D).

TV-MA -- This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17. This type of programming contains one or more of the following: graphic violence (V), explicit sexual situations (S), or crude indecent language (L).

Over the next few panels you'll learn how to block channels and get a better understanding of the rating terms for certain programming.

First, let's start by learning how to set a personal access code:

- 1 Press the MENU button** on the remote to display the on-screen menu.
 - 2 Press the CURSOR UP \wedge or DOWN \vee buttons** until the word **FEATURES** is highlighted.
 - 3 Press the CURSOR RIGHT $>$ button** to display the FEATURES menu options.
 - 4 Press the CURSOR UP \wedge or DOWN \vee buttons** until the words **AUTOLOCK™** are highlighted.
 - 5 Press the CURSOR RIGHT $>$ button.** The screen will read, **"ACCESS CODE - - - -"**
 - 6 Using the NUMBERED buttons,** enter 0, 7, 1, 1. **"XXXX"** appears on the Access Code screen as you press the numbered buttons.
- "INCORRECT CODE"** will appear on the screen, and **you will need to enter 0, 7, 1, 1 again.**
- 7 The screen will ask you to enter a "New Code."** Enter a **"new" 4 digit code using the NUMBERED buttons.** The screen will then ask you to **CONFIRM** the code you just entered. **Enter your new code again.** **"XXXX"** will appear when you enter your new code and then display the AutoLock™ menu options.


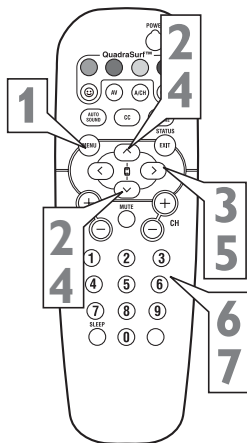
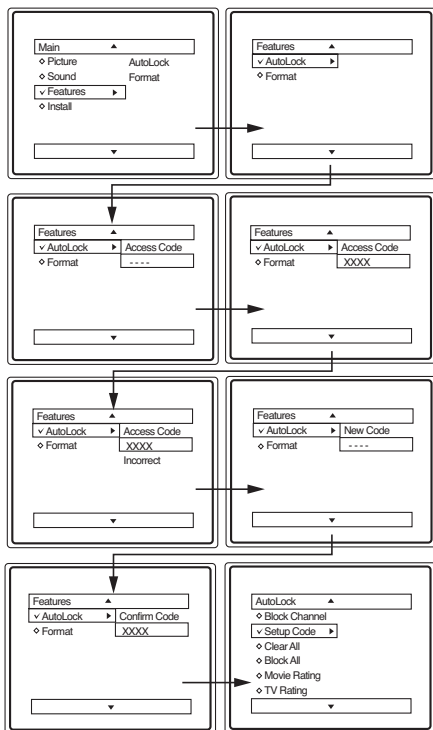


Proceed to the next panel to learn more...

After your personal access code has been set (see previous page), you are now ready to select the channels or the A/V Inputs you want to block out or censor. Once you've entered your access code and the AutoLock™ features are displayed on the screen:

- 1 Press the CURSOR UP \wedge or DOWN \vee buttons** until the words **BLOCK CHANNELS** are highlighted.
- 2 Press the CURSOR RIGHT $>$ button** to turn blocking ON or OFF for that channel. When ON is selected the channel will be blocked.
- 3 Press the CH + or CH - button** to select other channels you wish to block. Repeat step 2 to block the new channel.
- 4 When finished, press the STATUS/EXIT button** to remove the menu from the screen.

NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

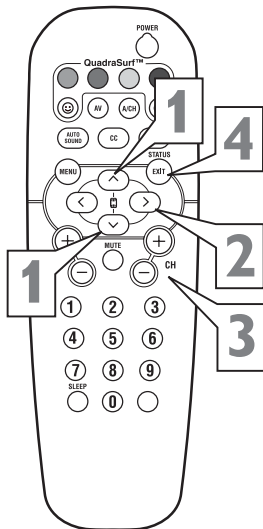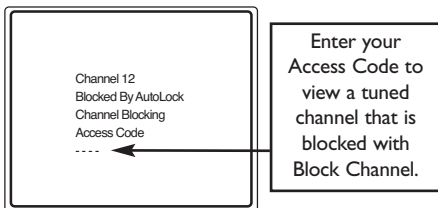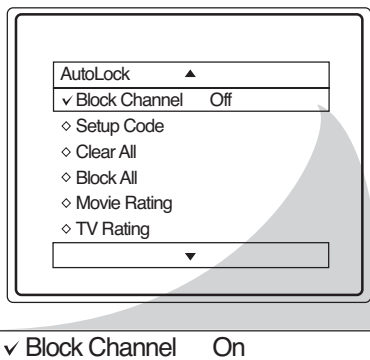

After blocking specific channels there may come a time when you want to block or clear all the channels at the same time. Once you've entered your access code and the AutoLock™ features are displayed on the screen:


- 1 Press the **CURSOR UP ▲** or **DOWN ▼** buttons to select either **CLEAR ALL** or **BLOCK ALL**.

- 2 If **CLEAR ALL** is selected, press the **CURSOR RIGHT >** button to clear all blocked channels. All channels will be viewable.


If **BLOCK ALL** is selected, press the **CURSOR RIGHT >** button to turn the control ON or OFF. When ON is selected, ALL available channels will be blocked from viewing.

- 3 When finished, press the **STATUS/EXIT** button to remove the menu from the screen.


NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

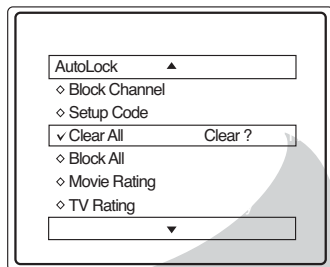

✓ Clear All Cleared

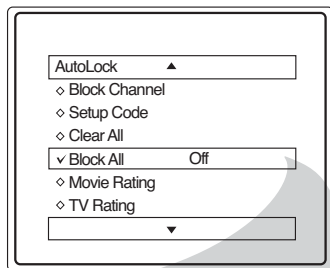

✓ Block All On

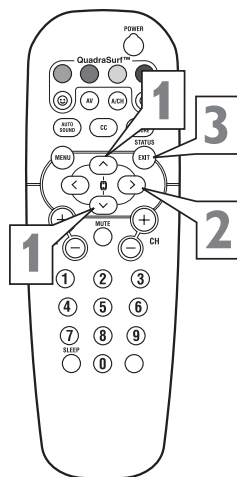



The AutoLock™ feature can block programming based on the Movie Industry ratings.

Once you've entered your access code and the AutoLock™ features are displayed on the screen:


- 1 Press the **CURSOR UP ▲** or **DOWN ▼** buttons to highlight the words **MOVIE RATING**.
- 2 Press the **CURSOR RIGHT >** button to display the **MOVIE RATING** options (G, PG, PG-13, R, NC17, or X).
- 3 Press the **CURSOR UP ▲** or **DOWN ▼** buttons to highlight any of the Movie Rating options. When highlighted, all these options can be turned **ON** (which will allow blocking) or **OFF** (which will allow viewing).
- 4 Use the **CURSOR RIGHT >** button on the remote to turn the rating option **ON** or **OFF**.

When a rating level is chosen to be blocked, any higher level rating will also be blocked from viewing. (i.e.: If "R" is selected to be blocked, NC-17 and X will automatically be blocked.)

NOTE: If you ever forget your code, the 0, 7, 1, 1 code is the factory default and can be used to enter and create a new access code.

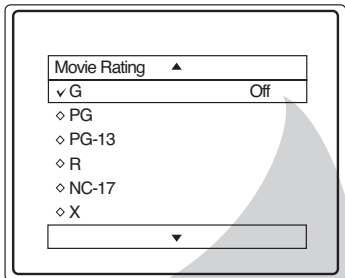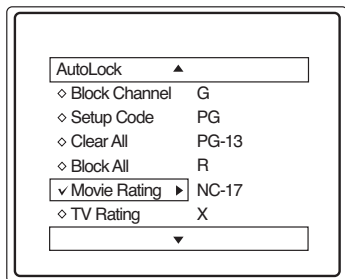

▼ G On

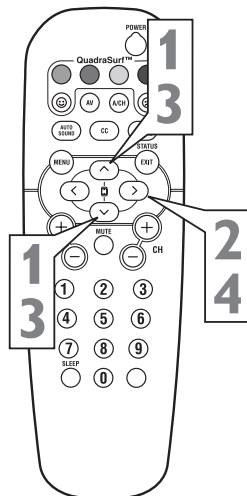


The AutoLock™ feature can block programming based on the TV Industry ratings.

Once you've entered your access code and the AutoLock™ features are displayed on the screen:


- 1** Press the **CURSOR UP** \wedge or **DOWN** \vee buttons to highlight the words TV RATING.
- 2** Press the **CURSOR RIGHT** $\>$ button to display the **TV RATING** options (TV-Y, TV-Y7, TV-G, TV-PG, TV-14, or TV-MA).
- 3** Press the **CURSOR UP** \wedge or **DOWN** \vee buttons to highlight any of the TV Rating options. When highlighted, all these options can be turned **ON** (which will allow blocking) or **OFF** (which will allow viewing).

NOTE: Some TV RATING options also have sub-ratings. The ratings of TV-Y7, TV-PG, TV-14, TV-MA can be customized to block V (violence), FV (fantasy violence), S (sexual situations), L (coarse language), or D (suggestive dialogue).

- 4** Press the **CURSOR RIGHT** $\>$ button on the remote to turn the TV-Y or TV-G rating ON or OFF. Or, press the **CURSOR RIGHT** $\>$ button to enter the sub-menus for the TV-Y7, TV-PG, TV-14 or TV-MA ratings.
- 5** If the TV-Y7, TV-PG, TV-14 or TV-MA sub-menu is accessed, press the **CURSOR UP** \wedge or **DOWN** \vee buttons to select one of the options (Block All, V, S, L, D, or FV).
- 6** Press the **CURSOR RIGHT** $\>$ button on the remote to turn the option ON or OFF.

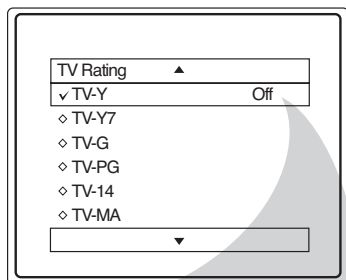


✓ TV-Y	On
✓ TV-Y7	Block All, FV
✓ TV-G	Off
✓ TV-PG	Block All, V, S, L, D
✓ TV-14	Block All, V, S, L, D
✓ TV-MA	Block All, V, S, L

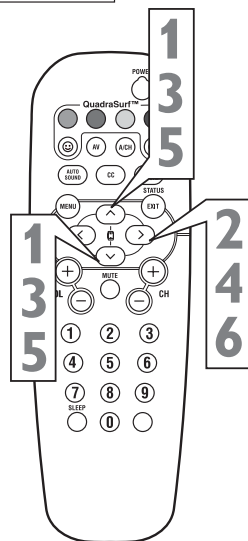

AutoLock™ offers the viewer other blocking features as well. With these Blocking Options, the censoring can be turned ON or OFF.

Once you've entered your access code and the AutoLock™ features are displayed on the screen:

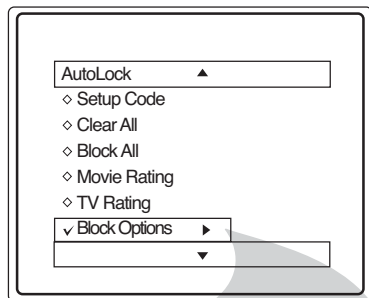

✓ Unrated	On
✓ No Rating	On
✓ Blocking	On

1 Press the **CURSOR UP** \wedge or **DOWN** \vee buttons until the words **BLOCKING OPTIONS** are highlighted.

2 Press the **CURSOR RIGHT** $\>$ button to display the **Blocking Options (BLOCKING, UNRATED, or NO RATING)** menu.


BLOCKING: Might be called the “master switch” for AutoLock™. When ON, ALL blocking/censoring will take place. When OFF, ALL blocking is disabled.

UNRATED: ALL unrated programs based on the Movie Ratings or Parental (TV) Guidelines can be blocked if this feature is set to ON and the BLOCKING feature is set to OFF.

NO RATING: ALL programming with NO content advisory data can be blocked if set to ON and the BLOCKING feature is set to OFF.


3 Press the **CURSOR UP** \wedge or **DOWN** \vee buttons to highlight the desired feature.

4 When highlighted, each feature can be turned **ON** or **OFF** using the **CURSOR RIGHT** $\>$ or the **CURSOR LEFT** $\<$ buttons on the remote.

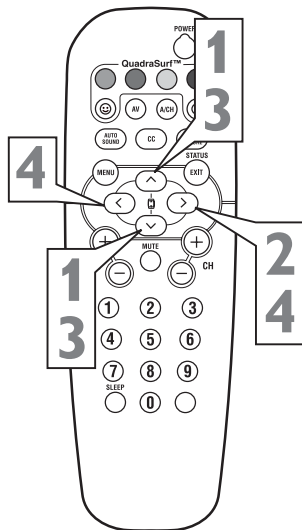

Closed Captioning (CC) allows you to read the voice content of television programs on the TV screen. Designed to help the hearing impaired, this feature uses on-screen "text boxes" to show dialogue and conversations while the TV program is in progress.

- 1 Press the CC button** on the remote to display the current Closed Captioning setting.
- 2 Press the CC button repeatedly** to choose from the four Closed Caption options (CC Off, CC1, CC2, CC Mute).
- 3 When finished, press the STATUS /EXIT button** to remove the menu from the TV's screen.

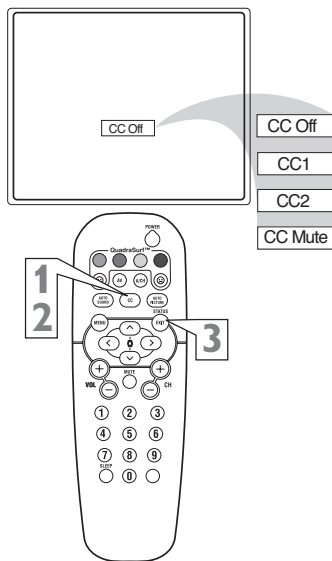


SLEEPTIMER

Your TV can be set to automatically turn itself off at a given amount of time.

- 1 Press the SLEEP button** on the remote control and the **SLEEP OFF** display will appear on the screen.
- 2 Press the SLEEP button repeatedly** to pick the amount of time (15, 30, 45, 60, 90, 120, 180, or 240 minutes) before the TV will turn itself off.



NOTE: An on-screen count down will appear during the last minute before the TV shuts itself off. If any button is pressed during the last minute of the countdown, the Sleep timer setting will be cancelled.

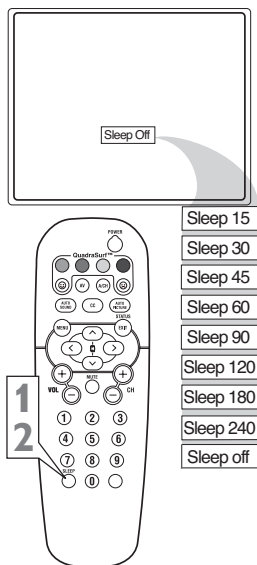

Whether you're watching a movie or a sporting event, your TV has automatic video control settings matched for your current program source or content.

- 1 Press the AUTO PICTURE button** on the remote control. The current Auto Picture setting will be displayed on the screen.
- 2 Press the AUTO PICTURE button repeatedly** to select either PERSONAL, MOVIES, SPORTS, WEAK SIGNAL, or MULTIMEDIA picture settings.

NOTE: The way you choose to set the Picture Menu Controls will become your PERSONAL setting.

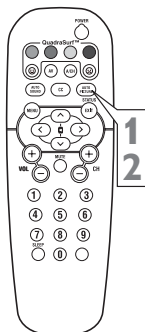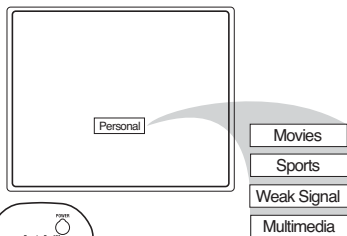

MOVIES - Preset picture options for watching Video Tapes, or DVDs.

SPORTS - Preset picture options for watching sporting events.

WEAK SIGNAL - Preset picture options for watching programs where the reception is not at its best.



MULTIMEDIA - Preset picture options for use with video gaming.

AUTO SOUND

The Auto Sound feature allows the listener to select between four different factory set sound options.

- 1 Press the AUTO SOUND button** on the remote control. The current Auto Sound setting will appear in the middle of the screen.
- 2 Press the AUTO SOUND button repeatedly** to toggle between the four settings. (PERSONAL, MUSIC, VOICE, or THEATRE)

NOTE: The way you choose to set the Sound Menu Controls will become your PERSONAL setting.

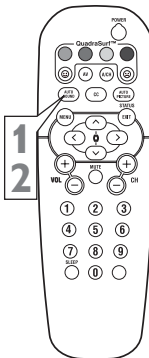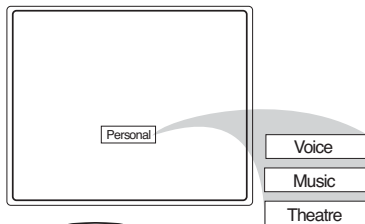

VOICE - Preset sound options for programming where heavy dialogue is present.

MUSIC - Preset sound options for musical programming where there is little dialogue.

THEATRE - Preset sound options for watching movies.

The QuadraSurf™ control allows you set up four different personal channel Surf lists using the colored buttons (on the remote control), each holding up to ten channels in its quick viewing “list.”


- 1 Press the CHANNEL (+) or (–) buttons** (or the NUMBER buttons) to select a channel to add to one of the SURF lists.
- 2 Press the SMILEY ☺ button** on the remote control to ADD the channel to one of the SURF lists.
- 3 Press the corresponding COLORED (Red, Green, Yellow or Blue) button** to add the channel to that button’s Surf list. (Up to ten channels per button can be stored.)

Repeat steps 1 through 3 to add additional channels (up to 10) to each of the SURF lists.

To remove a channel from one of the SURF lists;

- 4 Press the COLORED Quadra Surf button** until the desired channel appears. The screen will display the channel number with a colored “Smiley” face to indicate the Colored button it relates to.
- 5 While the “Smiley” face channel indicator is displayed, press the FROWNIE ☹ face button.** The screen will read, “Remove item? - Press ☹ .”
- 6 Press the FROWNIE ☹ face button again** to confirm your decision to remove the channel from the Surf list.

Repeat steps 4-6 to remove other channels from Surf lists.

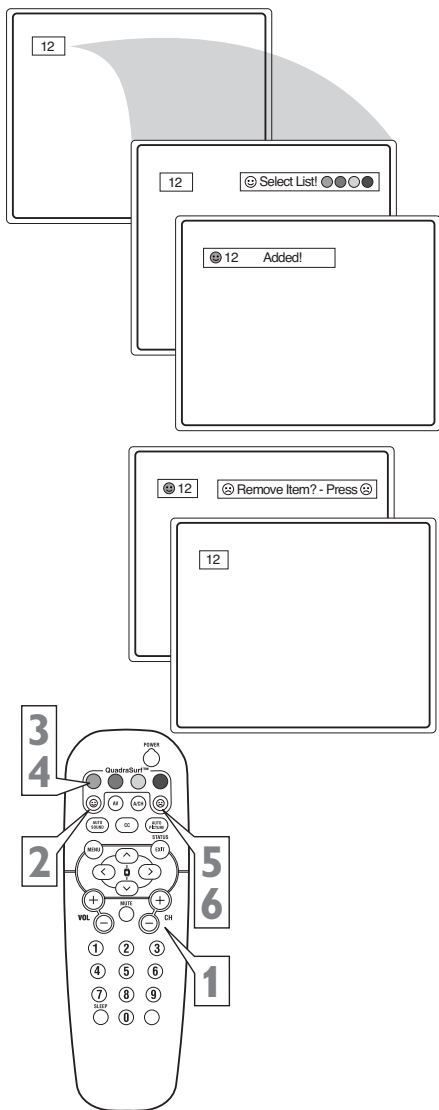




The Quadra Surf buttons on your remote control allow you to store up to 10 channels per button (40 total). You can even program the A/V Input channels for each button making them a "source" button.

Assuming channels have now been added to the four Quadra Surf lists (the four colored buttons, see the previous page), let's review how the feature works.

- 1 Press one of the pre-programmed COLORED buttons** on the remote (Red, Green, Yellow or Blue). The screen will display a smiley face with the first programmed channel for that surf list.
- 2 While the colored "smiley" face still appears on the screen, press the same COLORED button** on the remote to tune the second channel programmed for that specific surf list.
- 3 Repeatedly pressing the same COLORED button** while the "smiley" face appears will tune all the programmed channels. Pressing the COLORED button again will return you to the first channel in the list.

If the "smiley" face disappears from the screen and the same COLORED button is pressed, the surf channels will be displayed starting with the FIRST programmed channel again.

- 4 Repeat steps 1-3 for the other three COLORED buttons (Surf lists)** if desired.
- 5 Any time the "smiley" face appears with the channel number, pressing the "frownie" face button** will allow you to remove it from the list (see the previous page for more details).

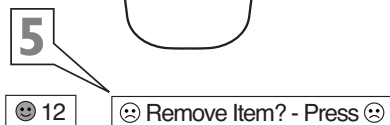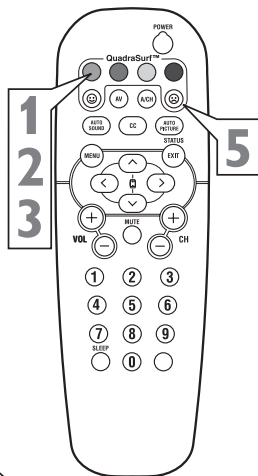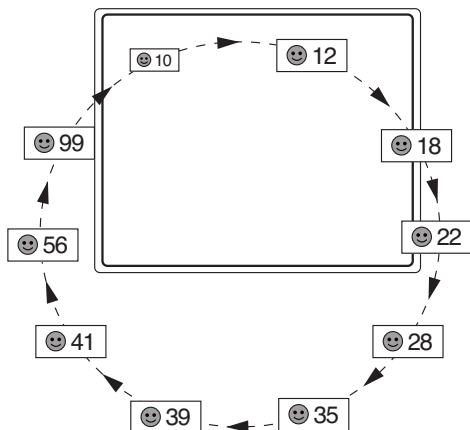

No Power

- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Check that the outlet is not on a wall switch.
- Be sure the fuse is not blown on the AC power strip, if one is being used.

No Picture

- Check antenna connections. Are they properly secured to the TV's ANT 75Ω plug?
- Check the TUNER MODE control for the correct tuner setting.
- Try running the Auto Program feature to find all available channels.
- Press the AV button on the remote to make sure the correct signal source is selected (FRONT or Current Channel).

No Sound

- Check the VOLUME buttons.
- Check the MUTE button on the remote control.
- If you're attempting to hook up auxiliary equipment, check the audio jack connections located on the front of the TV.

Remote Does Not Work

- Check the batteries. If necessary, replace them with AA Heavy Duty (Zinc Chloride) or Alkaline batteries.
- Clean the remote control and the remote control sensor window on the TV.
- Check the TV power cord. Unplug the TV, wait 10 seconds, then reinsert the plug into the outlet and push the POWER button again.
- Be sure the fuse is not blown on the AC power strip, if one is being used.
- Check to be sure the TV outlet is not on a wall switch.

TV Displays Wrong Channel or No Channels Above 13

- Repeat channel selection.
- Add the desired channel numbers (using the CHANNEL EDIT control) into the TV's memory.
- Check to be sure the TUNER MODES are set to the CABLE option and run the Auto Program feature to find all available channels.

90 Days Labor & One (1) Year Parts & One (1) Year Display

PHILIPS CONSUMER ELECTRONICS warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

PROOF OF PURCHASE: You must have proof of the date of purchase to receive warranted repair on the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

COVERAGE:

(If the product is determined to be defective)

LABOR: For a period of ninety (90) days from the date of purchase, Philips will repair or replace the product, at its option, at no charge, or pay the labor charges to any Philips authorized repair facility. After the period of ninety (90) days, Philips will no longer be responsible for charges incurred.

PARTS: For a period of one (1) year from the date of purchase, Philips will supply at no charge, new or rebuilt replacement parts in exchange for defective parts. Philips authorized service centers will provide removal and installation of the part under the specified labor warranty.

DISPLAY: For a period of one (1) year from the date of purchase, Philips will supply, at no charge, a new or rebuilt active display device in exchange for the defective display. Philips authorized service centers will provide removal and installation of the parts under the specified labor warranty.

EXCLUDED FROM WARRANTY COVERAGE

Your warranty does not cover:

- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Philips.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- Damage occurring to product during shipping when improperly packaged or cost associated with packaging.

- Product lost in shipment and no signature verification of receipt can be provided.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Products sold AS IS or RENEWED.

TO OBTAIN WARRANTY SERVICE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Philips Customer Care Center at:
1-888-PHILIPS (1-888-744-5477)

TO OBTAIN WARRANTY SERVICE IN CANADA...

1-800-661-6162 (French Speaking)
1-888-PHILIPS (1-888-744-5477) - (English or Spanish Speaking)

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. PHILIPS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the PHILIPS partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Philips, P.O. Box 671539, Marietta, GA. 30006-0026

(Warranty: 4835 710 27400)

